

# CONNECTING YOUR BTP TO A WIRELESS NETWORK (WI-FI) FOR UPDATING


- Connect the keyboard via one of the USB ports to your BTP
- Start the BTP and wait until it is at the “Group” menu
- Hit the “escape” key
- Press the key combination **crtl + alt + w** at the same time
- The Network Manager will open
- If your network is not shown, choose ‘Scan’

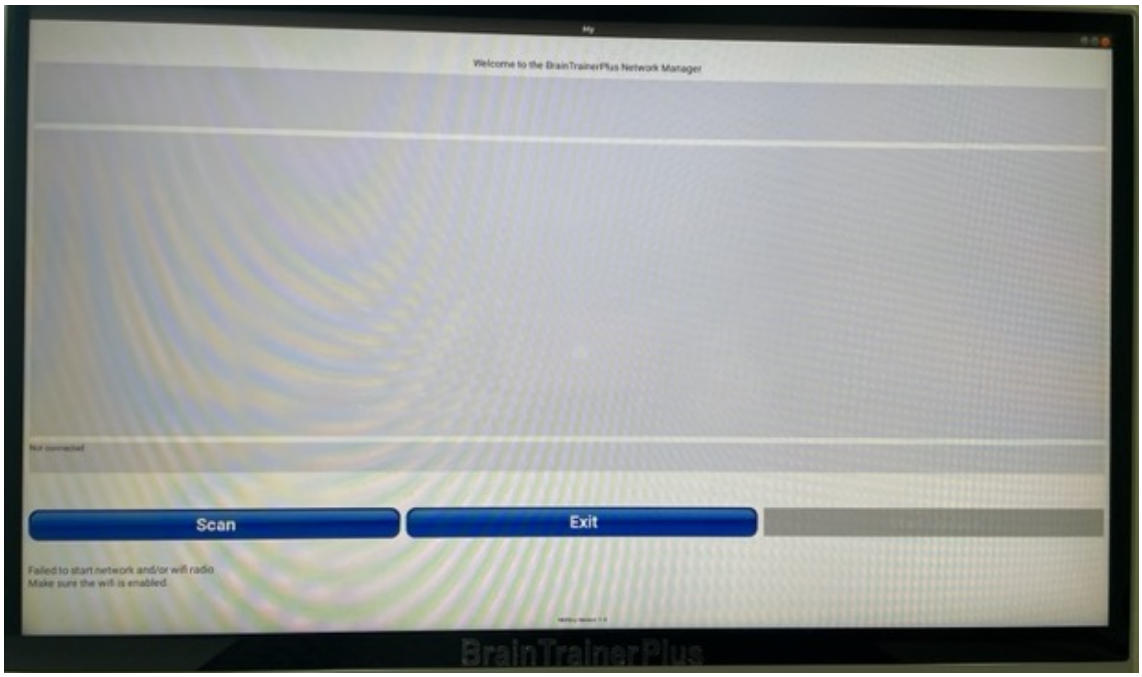

- Select the ‘Connect’ next to your Wi-Fi network

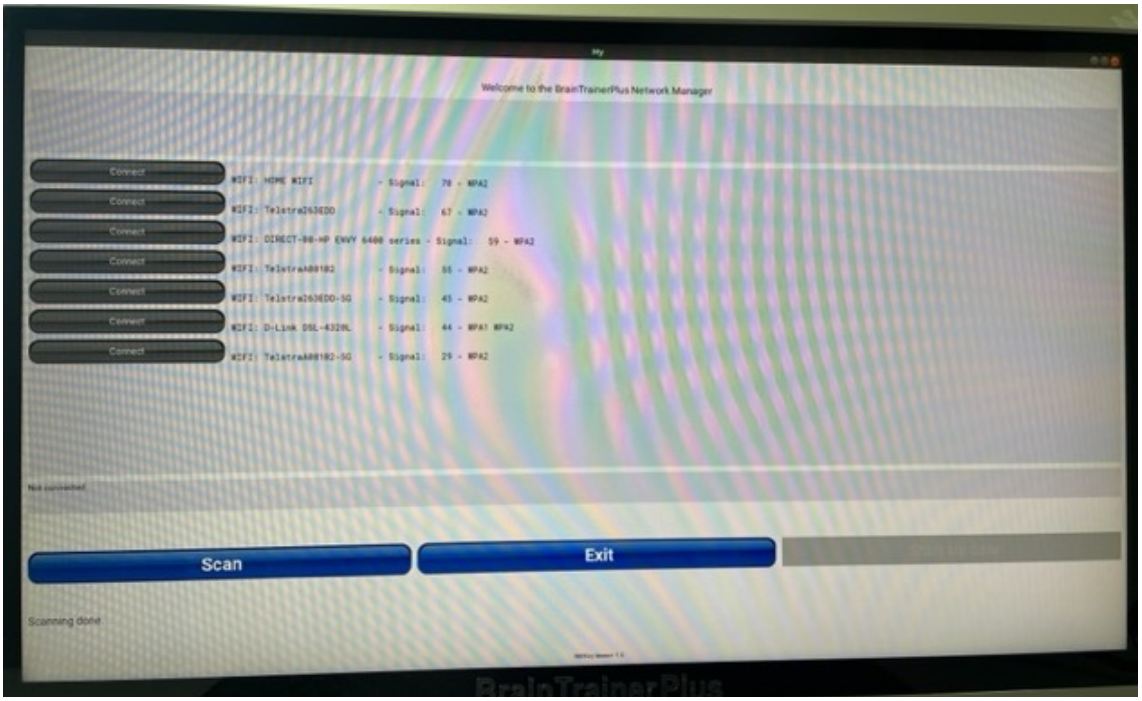


- Enter the password of the Wi-Fi network

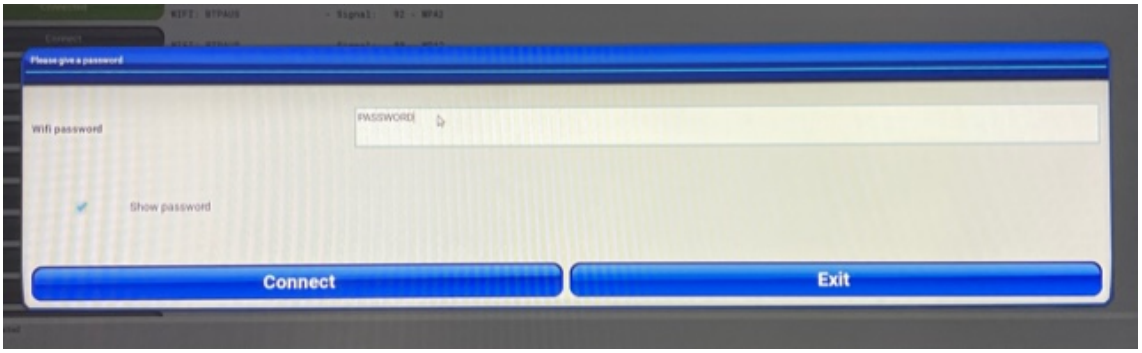



- Connect

- Confirm the connection is established (bottom left hand)
- Start Update' If it does not light up, 'scan' again.




- Confirm you want to start the update process 'Yes'

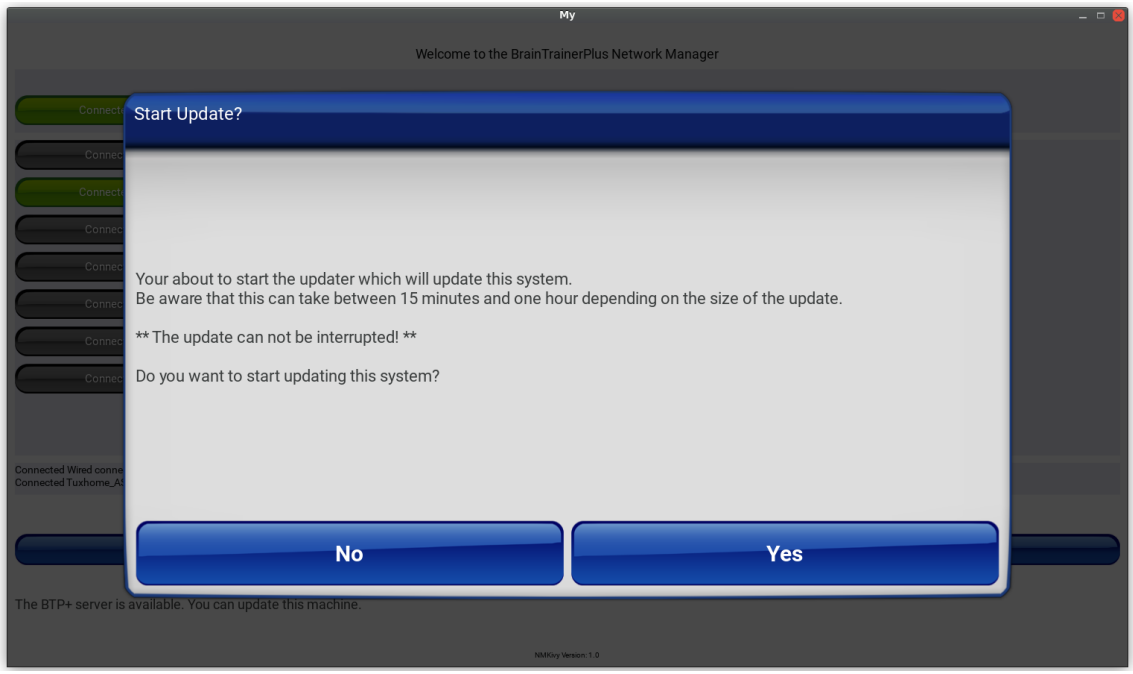


You can leave the BTP to run the update process, it will reboot when it is finished.